

Installation Instructions

JLT Oil Separator (2015-2018 6.2L HELLCAT, Jeep Trackhawk, and Challenger Demon Passenger Side)

#3060P

Please review complete instructions prior to installing.


3

4

5

	Tevrent comprete men detrone prior to metaming.
Step#	
1	Verify you have all of the following parts included in the kit: (1) JLT Oil Separator w/fittings, (1) mounting bracket, (2) M10 nuts, (2) M4 screws, (2) 1/2" hose kits
2	Gather all of the following tools needed for the installation: 15mm socket and ratchet, Phillips screw driver
	Remove the factory PCV hose from PCV valve to manifold- On the white connection, depress the button on the connector and pull the entire fitting off. On the black fitting there is a small tab protruding out, pull this away from the fitting and it will unclip.
	SAMSUN.

Install 1 flange nut onto engine stud with the flange facing OUT-

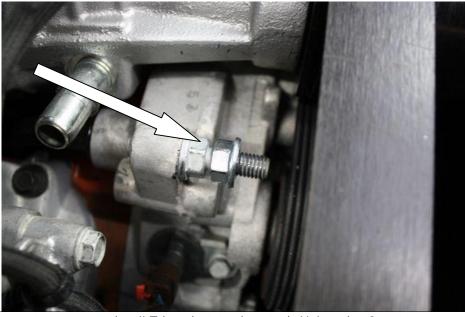

Use remaining nut to secure the JLT bracket to the stud. Using the 2 nuts you can "adjust" the position of the JLT bracket in and out.

Page 1 of 2 2-14-18



6

Use supplied screws to mount the JLT Separator and connect the hoses. "T" or Driver side goes behind the JLT bracket to the valve cover and the "J" or Passenger side to the manifold



To properly clean the filter in the Oil Separator, spray any degreaser or solvent through it and let it air dry. Clean it every 10,000 miles.

Thanks for the business. If you have any questions, please e-mail <u>info@JLTtruecoldair.com</u> or call 757-335-1940. Our hours are Monday-Friday. 8:00am – 5:00pm Eastern Time.

Warranty: JLT Performance Inc. will repair or replace any part of their product found upon our inspection to be defective in workmanship or material within 1 year from the purchase date for the original purchaser.

Disclaimer: JLT Performance Inc. makes no warranties whatsoever, expressed or implied, oral or written to any purchasers, except the warranty above. JLT Performance Inc. hereby specifically excludes from any implied warranty of merchantability or implied warranty of incidental, secondary, or consequential damages of any kind whatsoever. All purchasers and users of products manufactured by JLT Performance Inc. agree to hold harmless and indemnify JLT Performance Inc. from any and all claims arising from their use. Failure to receive notice of any or the limitations contained in this disclaimer shall not serve to extend liability to JLT Performance Inc. for any claims arising out of use of its products.

Return Policy: All returns will be subject to a 10%-25% restocking fee. Please visit www.JLTtruecoldair.com for complete return policy.

Page 2 of 2 2-14-18